
Additional Power Point Unit to Remote Ensure both Power Point units are connected to power and all outlets switches are in the ON position. Select channel 3 on your remote control. Use a paperclip to press the RESET button in the back of the remote control until you hear 3 consecutive beeps.

Additional Remote Controls to a Single Power Point Using the original remote contol insert a paperclip into the reset hole located on the back of the remote control until the power point begins to beep. Using the new remote control press the 'On' button (the green arrow) for three seconds until you hear 3 consecutive beeps.

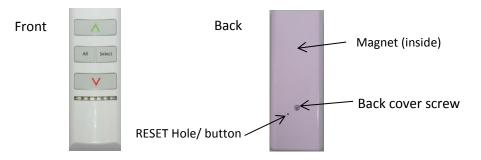

Battery Replacement On the back of the remote control remove the screw using a small Phillips screwdriver. Loosen the back by inserting the flat screw drive between the seams on both sides, top, middle and bottom. Gently remove the back cover. Replace the battery with a **GP23A** 12V battery.

Technical Information:

Remote Control: Frequency 433Mhz / Distance approx. 30-60 meters / Battery GP23A

Bluetooth: Frequency 2.4Ghz / Distance approx. 5-20 meters

Approval: ASA171006E

Power Point: Max Load 10A 2400W Resistive / Max Load 8A @ 0.8Pf Inductive /Voltage 240Vac 50Hz

Warranty:

Proof of Purchase: This warranty is only valid to the original purchaser and is not transferable. Please keep your receipt for warranty purposes, please present your receipt when claiming warranty as proof of purchase date. **Warranty:** This product is warranted to be free from any defects for a period of 12 months (one year) from the

date of purchase, any defects that may occur will be repaired or replaced.

Warranty Procedure: Please return the faulty product with the valid proof of purchase to the original place of purchase. The customer is responsible for freight, postage and packing costs when claiming warranty.

Exclusions: This warranty does not cover: batteries, misuse, packaging, general wear and tear, power surges, lightning strikes, floods, incorrect installation, damage due to lack of care, modifications or repair by an unauthorised person.

Maintenance: If the power supply cord is damaged, it must be replaced by the manufacturer and/or its service agent or similar qualified person.

To download our software or view instructional videos visit www.techome.com.au/admin-area and type in the code **4119** to enter the DOWNLOAD zone.



REMOTE CONTROL POWER POINT TH892 Series

(E, DIY, BT & BTE)







*Smart Phone not included in kit

INSTRUCTION AND INSTALLATION QUICK GUIDE

T: +61 (0)7 3297 9797 F: +61 (0)7 3297 9737

info@techome.com.au www.techome.com.au

33 Perrin Drive, Underwood QLD 4119 | PO Box 1210, Springwood QLD 4127

TecHome 'The HUB' app Downloaded from Google Play or The App



The Power Point is supplied in 4 versions:

- 1. Remote Power Point with remote control only TH892-E (electrician version)
- 2. Remote Power Point with remote control only TH892 (DIY version)
- 3. Bluetooth / Timer Remote Power Point controller TH892-BT (DIY version)
- 4. Bluetooth / Timer Remote Power Point controller TH892-BTE (electrician version)

WARNING

The TH892-E/BTE must only be installed by a qualified electrican!

Installation

Mount the power point unit to the wall/surface as shown below







*DO NOT EXCEED 10AMP TOTAL

The Remote

UP = Selected Channel On

ALL = Both Power Points OFF

SELECT = Change Channel

DOWN = Selected Channel Off



Adding a remote

Select channel 1
 on the remote
 you want to add.

 



2. Insert a paperclip into the reset hole on the back of the remote.

RESET Hole/ button

3. The Power Point will beep four times to indicate that the remote was paired successfully.

PowerPoint Usage



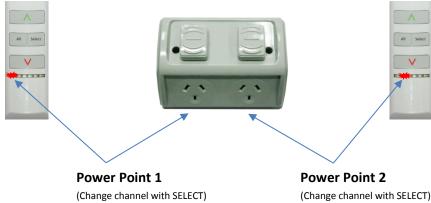

All On/Off Function



Swipe BACK of remote (magnet) to the right-hand side of the Power Point to turn ON or OFF both Power Points

The Hub Application





Bluetooth range = 5 - 20meters

Bluetooth and APP TH892-BT/BTE models only

Compatible with Apple & Android devices.

Search 'TecHome The Hub' in your app store.

