


DELETING THE MAX/MIN HEIGHT LIMITS


1. Adjust the TV Lift height to the desired max or min height you wish to delete. Using 'UP' or 'DOWN'.

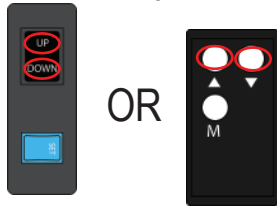

2. Flick the 'SET' switch to the right on the Switch Box.



3. Hold 'UP' (For Max) or 'DOWN' (For Min) on the Switch Box for 3 seconds until you hear a continuous beep.

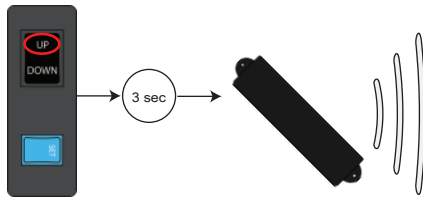


4. Return the 'SET' button back to the left again to regain control of the TV Lift.




SETTING A MEMORIZED HEIGHT

1. Adjust the TV Lift height to the desired height. Using any remote.

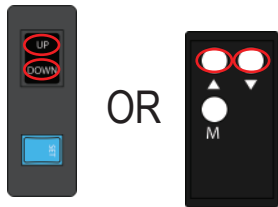

2. Press and hold the 'M' button on the RF Remote until you hear three (3) beeps.

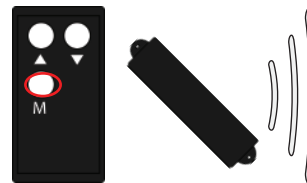

3. Pressing the 'M' button will now set the TV Lift to the memorized height.




TECHOME TV LIFT (TVL3)



QUICK INSTALLATION AND INSTRUCTION MANUAL

INSTALLING THE CONTROL BOX

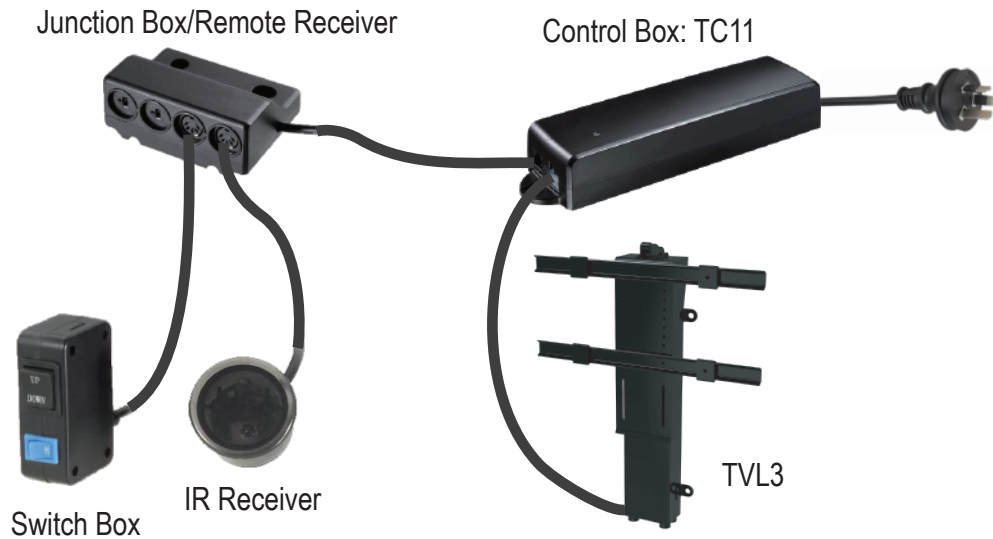


PAIRING THE RF REMOTE


1. Flick the **'SET'** switch to the right on the Switch Box.



3. During the continuous beeping, press any button on the RF Remote.

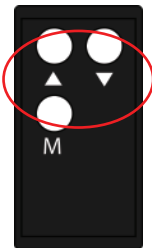

2. The Control Box will beep 3 times. Followed by 7 seconds of silence and then continuous beeping.

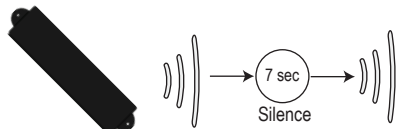


4. Return the **'SET'** button back to the left again to regain control of the TV Lift.




SETTING THE MAXIMUM HEIGHT LIMIT

1. Adjust the TV Lift height to the desired MAXIMUM height.

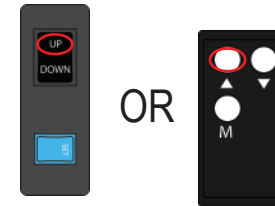

3. Hold **'UP'** on the Switch Box until you hear two consecutive beeps, indicating successful setting.

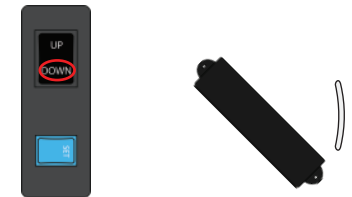

2. Flick the **'SET'** switch to the right on the Switch Box.




4. Return the **'SET'** button back to the left again to regain control of the TV Lift.




SETTING THE MINIMUM HEIGHT LIMIT

1. Adjust the TV Lift height to the desired MINIMUM height.

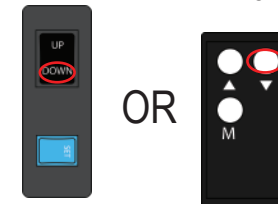

3. Hold **'DOWN'** on the Switch Box until you hear two consecutive beeps, indicating successful setting.

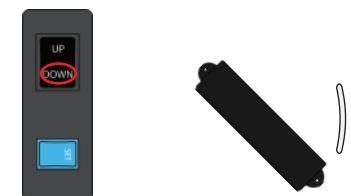

2. Flick the **'SET'** switch to the right on the Switch Box.



4. Return the **'SET'** button back to the left again to regain control of the TV Lift.

