


THE HUB APPLICATION


1. Download TecHome "TheHub" from the 'Google Play' or 'Apple Store'.




2. Select "appliance" in Devices

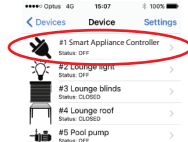

3. Enter your PIN or the default PIN "0001"

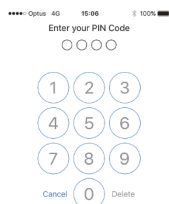


4. Select the outlet you want to control

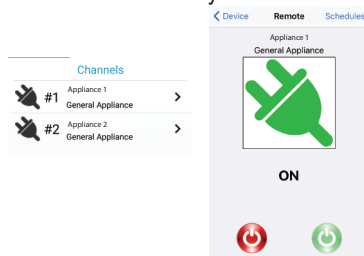

BATTERY REPLACEMENT FOR REMOTE

1. On the back of the remote control remove the screw using a small Phillips screwdriver.
2. Loosen the back by inserting the flat screw drive between the seams on both sides, top, middle and bottom.
3. Gently remove the back cover. Replace the battery with a GP23A 12V battery.

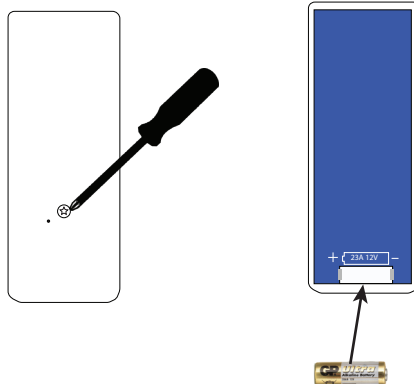

Warranty:

Proof of Purchase: This warranty is only valid to the original purchaser and is not transferable. Please keep your receipt for warranty purposes, please present your receipt when claiming warranty as proof of purchase date.

Warranty: This product is warranted to be free from any defects for a period of 12 months (one year) from the date of purchase, any defects that may occur will be repaired or replaced.

Warranty Procedure: Please return the faulty product with the valid proof of purchase to the original place of purchase. The customer is responsible for freight, postage and packing costs when claiming warranty.

Exclusions: This warranty does not cover: batteries, misuse, packaging, general wear and tear, power surges, lightning strikes, floods, incorrect installation, damage due to lack of care, modifications or repair by an unauthorised person.

Maintenance: If the power supply cord is damaged, it must be replaced by the manufacturer and/or its service agent or similar qualified person.



TH724 - SMART APPLIANCE CONTROLLER




INSTALLATION AND INSTRUCTION MANUAL

WARNING: The TH724 must only be installed by a licenced electrician!


INSTALLATION

WARNING: The TH724 must only be installed by a licenced electrician.
Do not exceed 10AMP total.

Ensure the appliance controller is fixed/installed onto a flat surface

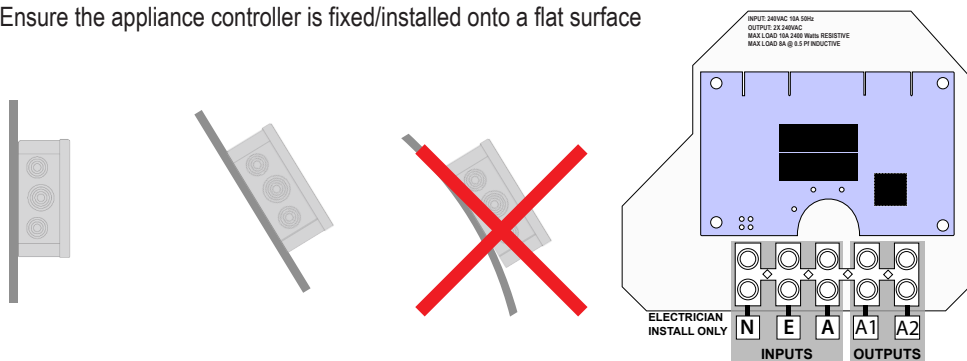


THE REMOTE

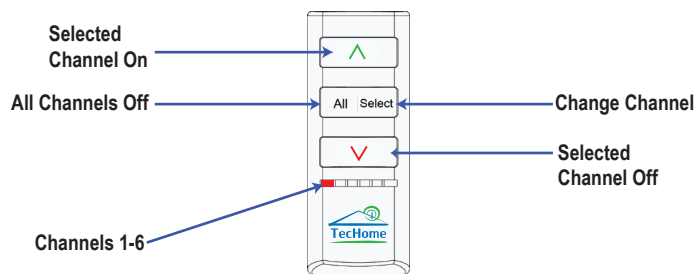


ADDING A FIRST REMOTE

 1. Select Channel 1 on the remote by using the select button.



 2. Insert a paperclip into the learn hole on the back of the remote (Next to the screw)




3. The Appliance Controller will beep four (4) times to indicate successful pairing.




ADDING A SECOND REMOTE TO THE APPLIANCE CONTROLLER

1. Select channel 1 by pressing "Select" on both the master and secondary remotes.

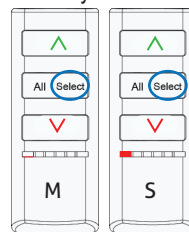

M = Master Controller (already Paired)
S = Second Remote (to be paired)

2. Insert a paper clip pin into the reset hole at the back of the master remote.

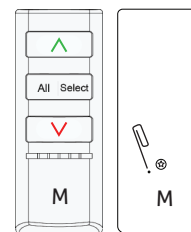


3. The appliance controller will begin to beep. Press the 'ON' (^) button on the second remote.




4. The appliance controller will beep four (4) times to indicate successful pairing.

ALL ON/OFF FUNCTION

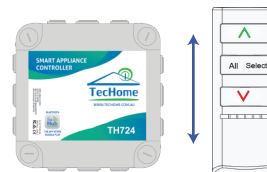

Swipe BACK of remote to the right-hand side of the Power Point to turn ON or OFF both Appliances

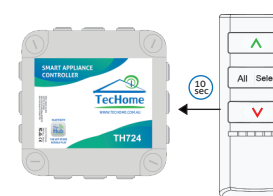


1. Hold the back of the remote to the right hand side of the appliance controller for 10 seconds.

2. The appliance controller will have a continuous tone then beep 4 times to indicate completion of deletion.

PAIRING TWO APPLIANCE CONTROLLERS TO ONE REMOTE

1. Ensure the remote is already learned to appliance controller 1 and all remotes have been deleted from appliance controller 2.


2. Isolate appliance controller 1 by cutting the power from the mains.

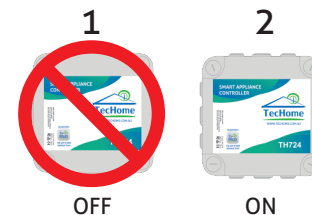

3. Select Channel 3 on the remote by using the "select" button.



 4. Insert a paper clip pin into the reset hole at the back of the remote.



5. The appliance controller will beep four (4) times to indicate successful pairing.

