


# Two/Four Channel Motor Controller

## How to Learn a New Remote




### What you need

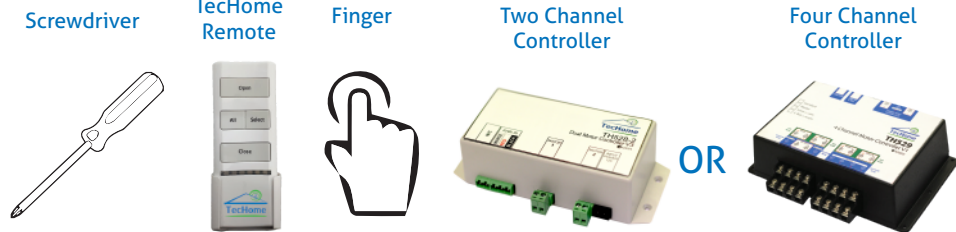


### Procedure

1. Open the enclosure of the Motor Controller.

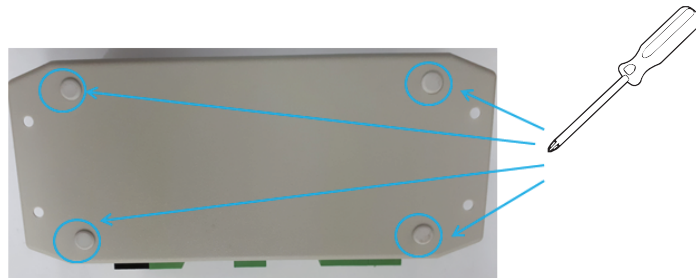

2. Press the "LRN" button on the square circuit board.

\*A red light will then flash steadily

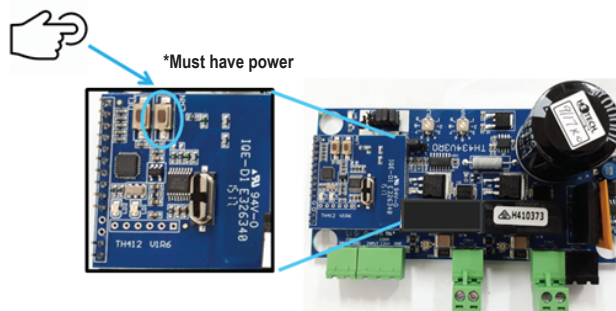

3. While on CH 1, Press "Open" on the remote.  
(or up for the the slimline or "1" on the key fob).



If the remote has been successfully learned,  
the red light will flash rapidly for 0.5 seconds

**Note.** The learning mode on the Receiver times out after 30 seconds

## MOTION AND AUTOMATION

P: +61 (0)7 3297 9797 A: 33 Perrin Drive, Underwood, QLD, 4119, Australia  
E: [info@techome.com.au](mailto:info@techome.com.au) W: [www.techome.com.au](http://www.techome.com.au)


# Two/Four Channel Motor Controller

## How to Delete remotes




### Deleteing All Remotes

1. Press and hold both 'DEL' and 'LRN' buttons on the receiver. ('DEL' button needs to be pressed first).
2. Hold both buttons, the LED light 'LD2' will flash for 10 secs.
3. When the receiver has completet deleting the remotes, both LED lights , 'LD1' and 'LD2' will stay lit for 2-3 secs.

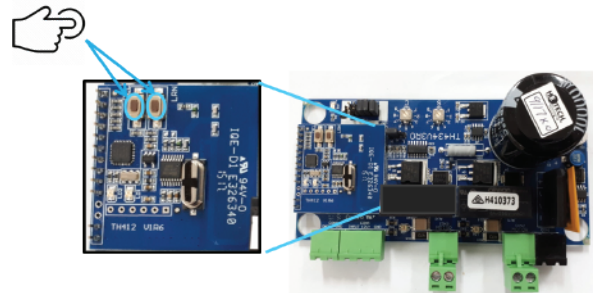

### Deleteing One Remote

1. Press the 'DEL' button on the receiver, LED light 'LD2' will light up.
2. Press any button on the remote to be deleted and 'LD2' will flash fast.
3. Once the remote has been deleted, 'LD2' will stop flashing.

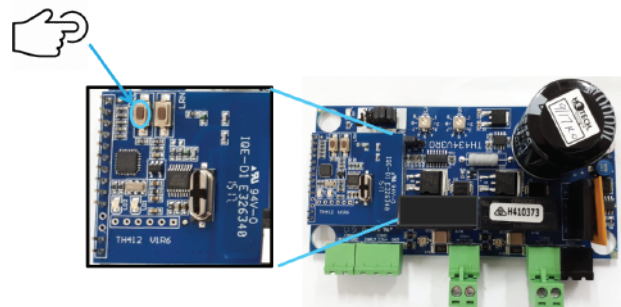

## MOTION AND AUTOMATION

P: +61 (0)7 3297 9797 A: 33 Perrin Drive, Underwood, QLD, 4119, Australia  
E: [info@techome.com.au](mailto:info@techome.com.au) W: [www.techome.com.au](http://www.techome.com.au)